

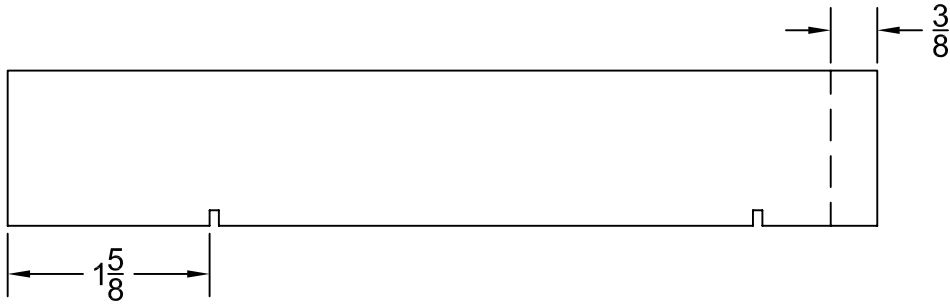



cut block off here

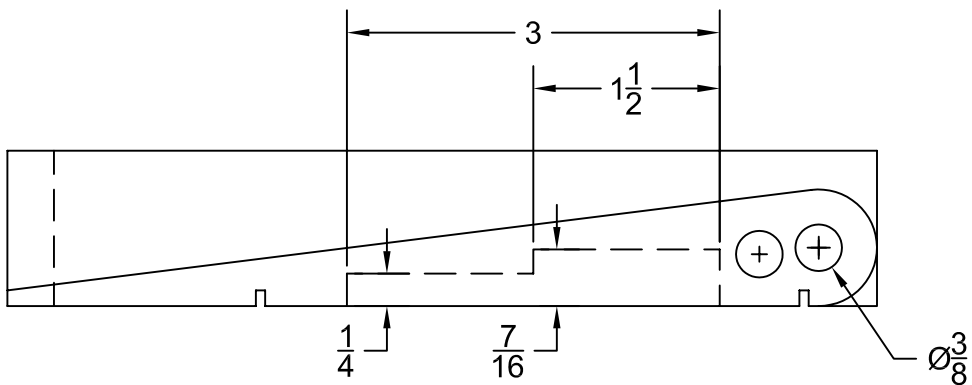

& glue another block to front

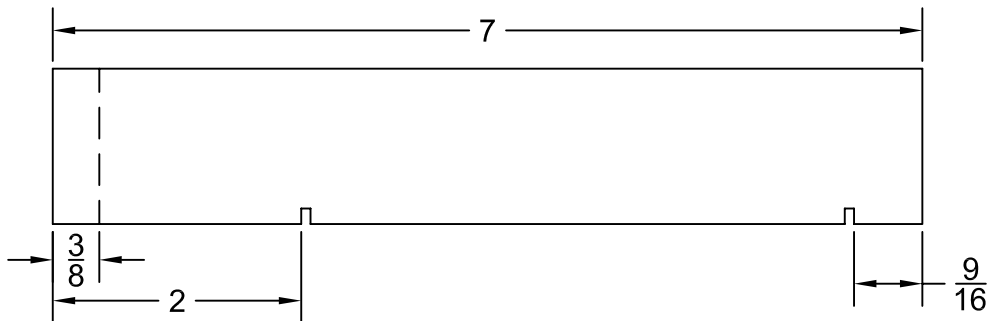


FILL THE TWO $\frac{3}{8}$ HOLES WITH MELTED LEAD (LEAD IS POISONOUS!) TAKE PRECAUTIONS

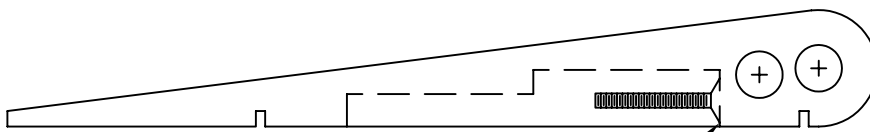

USE 2 PART EPOXY TO ATTACH MACHINE SCREW TO CAR.

FULL SCALE LAYOUT

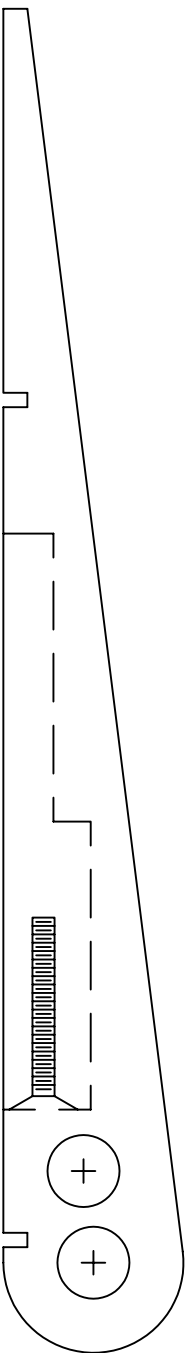

CUT OUT THIS PATTERN AND TRACE ONTO BLOCK